

COMPLIANCE WITH FCC REGULATIONS:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SUMMIT[™]
Toys with a twist

© 2009 Summit Products, LLC.
Birmingham, AL 35205
www.summittoy.com
Made and Printed in China

CUSTOMIZABLE COUNTING MONEY JAR



INSTRUCTIONS

DEPOSITING COINS:


- Insert a coin into the slot on the top of the Customizable Counting Money Jar. The amount deposited will appear on the display.

DEPOSITING CURRENCY:

- Carefully fold your currency to a size that fits into the currency slot on the jar lid.

- Insert the currency and press corresponding currency button on the jar lid.

- The display will show the amount.

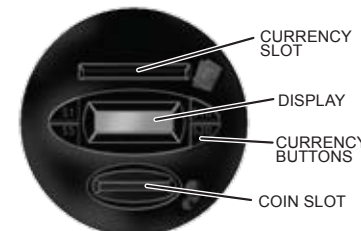

RETRIEVING YOUR COINS AND CURRENCY:

- Unscrew the **top half** of the lid to remove coins and currency. When removing the lid, keep a tight grip on the base while **unscrewing** the top half of the lid. (See Fig. A)

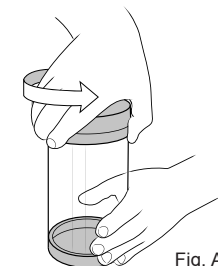


Fig. A

- To clear the account balance: remove the jar lid and press the button labeled "RESET" found directly below the battery compartment on the lid bottom. The balance will reset and the display will read \$0.00.

ABOUT BALANCE GUARD™:

- The Balance Guard™ feature remembers your balance even when replacing batteries or when the batteries die.

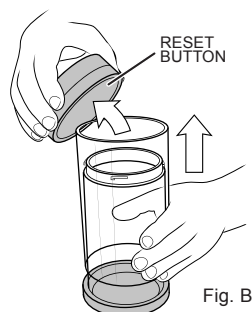


Fig. B

CUSTOMIZING GRAPHICS:

- Unlock the **complete** lid 1/4 turn counter-clockwise while keeping a tight grip on the base and remove the clear outer cylinder. (See Fig. B)
- Wrap the graphic around the clear center cylinder face out. (See Fig. C)
- Replace the outer cylinder and lock the **complete** lid 1/4 turn clockwise back in place.
- **Create your own unique wraps:** Use the included graphic wraps as a guide.



Fig. C

CARE AND MAINTENANCE:

- Keep the Money Jar clean and dry. If any part of the Jar gets wet, wipe it dry immediately. Use and store the bank indoors, in environments which maintain normal temperatures.
- Handle the Jar carefully and do not drop it.
- Occasionally wipe the Jar with a damp cloth to keep it clean and looking new. Do not allow water in or near the electronic slot, as this may damage the device.
- Modifying or tampering with the Money Jar's internal components

can cause it to malfunction and will void any warranty.

⚠ BATTERY CAUTION: **READ AND SAVE THESE INSTRUCTIONS.**

Only adults should replace batteries. Do not mix old and new batteries or different types of batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of old batteries promptly and properly. Do not burn or bury batteries. Replace the batteries when the jar stops operating properly or the display becomes dim (Note: Removing the batteries will reset the account balance to zero). Batteries can leak chemicals and harm electronic parts, so remove them if you do not plan to use your jar for several weeks.

- Use only fresh batteries of the required size and recommended type.
- Never use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Be sure the batteries are inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

INSTALLING/CHANGING THE BATTERIES:

Your new Counting Money Jar requires 2 x 'AA' batteries (Not included). Remove the lid from the Jar carefully. Use a Philips screwdriver to loosen the screw on the battery compartment cover and lift the cover. Install 2 x 'AA' batteries into the compartment, being careful to match the polarity as indicated (+ and -). Replace the cover over the compartment and tighten the screw. Screw the lid back onto the Jar tightly.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.