



ANIMAL WHISPERER'S CALLERS



CALL OF THE WILD

Call up ten different Dino, Ocean or Zoo sounds with each of the Animal Whisperer's ANIMAL CALLERS. From Velociraptor to mighty T-Rex, Jaguars to Chimps, Killer Whales to Dolphins. Just set the dial and blow. The harder you blow, the louder the call. Authentic and realistic sculptural detail.



OCEAN CALLER



DINO CALLER



ZOO CALLER

Instructions:

USING THE ANIMAL CALLER:

On the underside of the CALLER, flip the "ON/DEMO" switch to "ON." Move the slider switch along the image decal sticker to select the call you wish to make. The Backyard Safari Animal Whisperer's CALLER is breath-activated. The harder you blow, the louder the call.

CARE AND CAUTION

- Keep the CALLER clean and dry. If any part of the CALLER gets wet, wipe it dry immediately.
- Do not leave the CALLER outside or exposed to the elements.
- Do not blow the CALLER directly into anyone's face or ears.
- Wipe the mouth piece clean after use.
- Never clean the CALLER with household products. Use water only.

BATTERY CAUTION:

READ AND SAVE THESE INSTRUCTIONS.

Only adults should replace batteries. Do not mix old and new batteries or different types of batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of old batteries promptly and properly. Do not burn or bury batteries.

Replace the batteries when the CALLER stops operating properly or the sound becomes soft. Batteries can leak chemicals and harm electronic parts, so remove them if you do not plan to use your CALLER for several weeks.

- Use only fresh batteries of the required size and recommended type.
- Non-rechargeable batteries are not to be recharged.
- Be sure the batteries are inserted with the correct polarity.
- Exhausted batteries should be removed from the CALLER.
- The supply terminals are not to be short-circuited.


INSTALLING/CHANGING THE BATTERIES:

The CALLER requires 2 x 'AA' batteries (included). Using a phillips-head screwdriver, loosen the screw on the battery compartment and lift the cover. Remove the battery cover from the underside of the CALLER carefully. Install 2 x 'AA' batteries into the compartment, being careful to match the polarity as indicated (+ and -). Replace the cover over the compartment and tighten the screw.

COMPLIANCE WITH FCC REGULATIONS:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference,
- (2) this device must accept any interference received, including interference that may cause undesired operation

 **CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

SUMMIT™
Toys with a twist

www.SummitToy.com