

**BACKYARD
SAFARI
OUTFITTERS™**

CAMPFIRE GLOW LANTERN



THAT WARM GLOW

The CAMPFIRE GLOW LANTERN works two ways. First, light up your base camp with the bright white luminance from the upper dome. Then, flip a switch to activate the warm flickering campfire glow built in the lantern's base. No flames. No heat. Just a comforting illusion - and an excuse to gather 'round the old campfire to sing campy songs or tell scary tales.


Instructions:

The CAMPFIRE GLOW LANTERN has 2 light settings. To turn on the bright white light slide the switch all the way to the right. Go ahead and hang it from a tree branch overhead using the carry handle. To turn on the bottom "flickering campfire glow" slide the switch all the way to the left. Now you can set the lantern down and enjoy a comforting warm glow. Slide the switch to the center position to turn the lantern off.

BATTERY CAUTION: READ AND SAVE THESE INSTRUCTIONS.

Only adults should replace batteries. Do not mix old and new batteries or different types of batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of old batteries promptly and properly. Do not burn or bury batteries. Replace the batteries when the LANTERN stops operating properly or the light becomes dim. Batteries can leak chemicals and harm electronic parts, so remove them if you do not plan to use your LANTERN for several weeks.

- Use only fresh batteries of the required size and recommended type.
- Non-rechargeable batteries are not to be recharged.
- Be sure the batteries are inserted with the correct polarity.
- Exhausted batteries should be removed from the LANTERN.
- The supply terminals are not to be short-circuited.

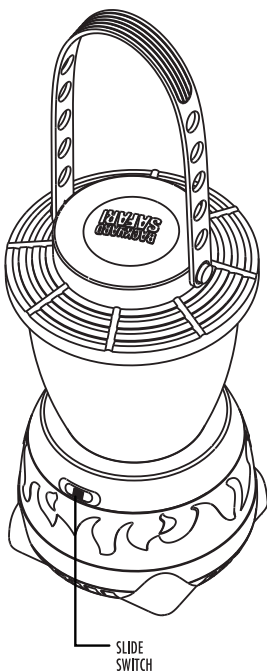


INSTALLING/CHANGING THE BATTERIES:

The LANTERN requires 4 x 'AA' batteries (not included). Using a phillips-head screwdriver, loosen the screw on the battery compartment and lift the cover. Remove the battery cover from the bottom of the LANTERN carefully. Install 4 x 'AA' batteries into the compartment, being careful to match the polarity as indicated (+ and -). Replace the cover over the compartment and tighten the screw.

COMPLIANCE WITH FCC REGULATIONS:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference,
- (2) this device must accept any interference received, including interference that may cause undesired operation

 **CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

SUMMIT™
Toys with a twist