


SPRAY RACER™

R-3 RED ROAD ROCKER

SPRAY RACER Instructions

Congratulations on getting your very own Spray Racer. You will soon see just how much fun this awesome Racer really is. But, why just read about how much fun your going to have...when you could be HAVING actual fun! Let's get this Racer on the road already!

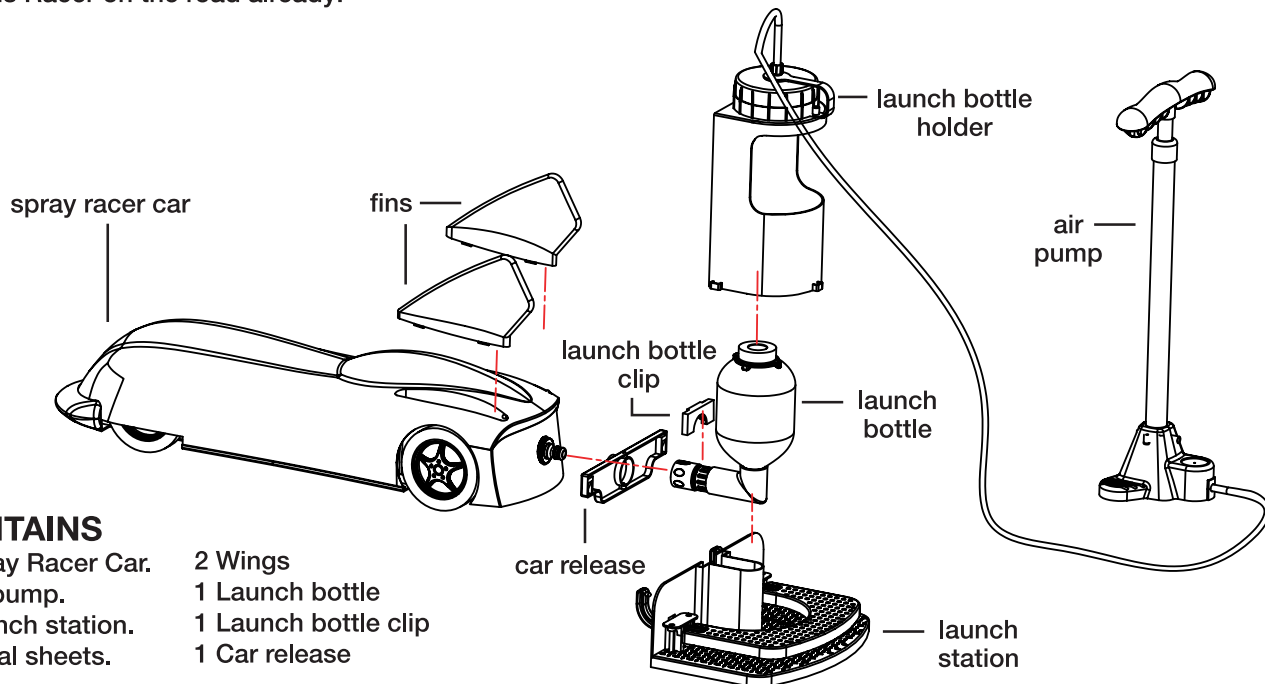

CONTAINS

- | | |
|--------------------|----------------------|
| 1 Spray Racer Car. | 2 Wings |
| 1 Air pump. | 1 Launch bottle |
| 1 Launch station. | 1 Launch bottle clip |
| 3 Decal sheets. | 1 Car release |

USING YOUR NEW SPRAY RACER:

First, remove the Spray Racer and it's parts completely from the package and check for damage.

Everything okay? Great, next, read the instruction thoroughly before continuing. Remember, this is an outdoor toy only, so take everything outside and find a level, paved area. Someplace that's smooth and has a nice bit of runway.

STEP 1: The Launch Station will require assembly, so grab Mom Dad for that. Following the diagram above, assemble the Launch Station by snapping the pieces together. Once you have the Launch Station together, then we can really get started! **NOTE:** To assemble the Car Release part, the pedal on the Launch Station must be lifted up. Align the top of the Launch Bottle with Launch Bottle Holder. Snap the 3 snaps between the Launch Station and the Launch Bottle Holder together well.

STEP 2: Snap the fins onto the Spray Racer Car and connect the Spray Racer Car to the Launch Station. You do this by connecting the male valve, located on the rear bumper of the Car, to the female connector on the Launch Station.

STEP 3: Unscrew the top of the Launch Station Water Tank and put in 1 - 1.2 liter (34 - 40 ounces) of water. (Remember, you have to bring enough water TO the Water Tank. The water you bring will be your fuel to your Spray Racer Car for successive launching.) Once done, **FIRMLY** screw the top back on the Water Tank. If you don't make sure the top is on tightly, you will lose all your water and air pressure just when you need it the most!

IMPORTANT: check and make sure the Air Pump and the Water Tank are connected properly.

STEP 4: You will now need to start pumping the air and water mixture into your Spray Racer Car. The Air Pump should be sitting on a hard, flat surface. Use both hands to pump the air and water. Also, near the bottom of the Air Pump there is an area for you to place both your feet for added stability. Once you start pumping, watch your pressure gauge, located at the base of the Air Pump. Keep going until that pressure gauge shows near HIGH. The limit is 60 PSI of pressure (approximately 50 pumps). **IMPORTANT:** Don't go beyond that point and **NEVER**, ever unscrew the top of the Water Tank while you are using the Air Pump. That would release the pressure you are trying to build and it could causes injuries. **NOTE:** The safety valve inside the Air Pump will keep the guage from going over to the darkest red to prevent over-pressured.

Step 5, Okay, so your Spray Racer Car's fuel tank is all full and ready to go, now what? Get ready to have fun, that's what! Lay the Air Pump off to the side of the Spray Racer Car, but don't disconnect it. Stand directly behind the Launching Station. See the release peddle located behind the Water Tank? Press down on it with your foot. Once you press that release peddle, stand back because it's instant launch! Keep two things in mind A.) you're going to get wet and B.) you will have to refill the Spray Racer after each launch. Not too much work for so much fun, right???

CARING FOR THE SPRAY RACER:

When you have finished for the day, it is important to remember that you will need to empty both the Spray Racer Car and Water Tank of any remaining water. Don't ever put either away without clearing out any left over water. To do this, simply turn the Spray Racer Car upright(nose to the sky) and let the water run out. As for the Launch Station, just hold it upside down.

Keep the Spray Racer and all it's parts, clean and dry. If anything does get wet, wipe it dry immediately.

Use under normal, and safe play conditions only.

When not in use, store the Spray Racer and it's parts in a clean, dry area and do not leave anything exposed to the elements.

Watch for any cracks or damage to the Spray Racer Car, Air Pump, Launch Station or Water Tank.

Always check to make sure the connecting tubes are tight and in good shape.

Make sure the wheels spin freely by keeping the axles clean.

Occasionally, wipe your Spray Racer and equipment off with a damp cloth.

Remember, if you follow the instructions, keep the Spray Racer Car and equipment clean and remember not to leave anything exposed directly to the elements, it will provide you with tons of fun.

⚠ CAUTION

The Spray Racer is an **OUTSIDE** toy **ONLY!**

If you press down on the release peddle and **NOTHING HAPPENS**, get an adult to help you!

The Spray Racer is even more fun when played with a buddy!

Make sure you have a large, paved and smooth stretch of land when launching the Spray Racer...this is no ordinary racer and you'll need plenty of runway!

Do not try and turn the wheels, the Spray Racer Car is designed to only go straight ahead.

Do not ever aim the Spray Racer at other people or animals.

Do not use on or near road.

Fill the water tank with **WATER ONLY!!** Anything else will damage your Spray Racer.

Do not **OVERFILL** either the water tank or the Spray Racer. Remember, the idea is to have fun with a really cool toy, not to injury yourself or anyone else. So, please follow all the guidelines carefully.

Pump is only intended for Spray Racer.

Never use alternate pump or other air source with the spray racer.

Do not try and stop or interfere with the Spray Racer Car while it is in motion.

Do not put anything else around the launch pedal when releasing your Spray Racer Car. Yes, that **DOES** means you fingers too!

Keep your hands and face away from the Spray Racer Car and Launch Station while launching the Spray Racer Car.

Check to make sure the Launcher and Spray Racer come together properly. Are there any leaks?

Do not ever launch the Spray Racer Car without it's body and front bumper attached.

Do not ever try to launch anything except for the Spray Racer Car!

Do not ever try and use replacement parts. The Spray Racer Car, Air Pump, Launch Station and Water Tank were all especially designed to work together.

Do not leave your Spray Racer or any of it's parts, outside or exposed to the elements.

Do not store Spray Racer under pressure.

Only use and/or store Spray Racer in temperatures ranging from 40 - 95° F.

When cleaning the Spray Racer or any of it's parts, **USE ONLY WATER AND NEVER HOUSEHOLD PRODUCTS**, not even window cleaner.

SUMMIT™

Toys with a twist

© 2008 Summit Products, LLC.

Trussville, AL 35173

PRINTED IN CHINA