

## Instructions for the

# Amazing Money Jar

You don't have to be a wizard for this jar to perform magic. Your Amazing Money Jar makes it fun to save money. The coin slot recognizes the amount of each coin as you drop them into the jar.

## INSTALLING BATTERIES

Your Amazing Money Jar requires 2 x AA batteries (not included).

1. Use a Phillips screwdriver to loosen the screw on the battery compartment cover, then lift up the cover.
2. Put the batteries into the compartment using care to match the polarity (+ and -) as marked inside.
- 3) Replace the cover and tighten the screw.

### CAUTION

- Only adults should replace batteries.
- Do not mix old and new batteries or different types of batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Use only fresh batteries of the required size and recommended type.
- Dispose of old batteries promptly and properly. Do not burn or bury them.
- If you do not plan to use your jar for several weeks, remove the batteries. Batteries can leak chemicals that can harm electronic parts.
- Replace the batteries when the jar stops operating properly or the display becomes dim.

## TO DEPOSIT COINS IN THE JAR

To deposit a coin, insert the coin into the coin slot on the jar lid. The amount of the coin deposited will be displayed on the screen.

This product will only accept the following coins: 1¢ (pennies), 5¢ (nickels), 10¢ (dimes), and 25¢ (quarters).

## TO CLEAR YOUR ACCOUNT BALANCE OR RESET

Unscrew the lid from the jar. Press RESET under the jar lid. Your account will be set to zero. \$0.00 displays on the screen.

**NOTE:** Removing the batteries will reset the account balance to zero.

## CARE

Keep the jar and lid clean and dry. If it gets wet, wipe it dry immediately. Use and store the bank in normal temperature environments only. Handle the jar carefully. Do not drop it. To keep it clean and looking new, wipe it with a damp cloth occasionally.

Modifying or tampering with the Amazing Money Jar's internal components can cause a malfunction.

## COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE :** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



© 2004 Summit Products, LLC.  
Trussville, AL 35173  
Printed in China