

Keep Safe Diary

Instruction Sheet

LIST OF CONTENTS:

1. diary 2. gel pen 3. pad of paper 4. stickers

INSTALLING BATTERIES:

Your Keep Safe Diary requires 3 x AAA batteries (not included).
Battery installation should only be performed by an adult.

1. Use a Phillips screwdriver to loosen the screw on the battery compartment cover, then lift up the cover (diagram B).
2. Put the batteries into the compartment using care to match the polarity (+ and -) as marked inside.
3. Replace the cover and tighten the screw.

TO OPEN DIARY:

1. Enter the preset password A,B,C,D using musical buttons on cover.
3. You can open the diary within 6 seconds.

TO CHANGE PASSWORD:



After completing the steps above in "to open diary," then follow these steps:

1. Press the "change password" button located inside the diary (see diagram A).
2. Within 10 seconds enter your new 4-letter password.

NOTE: Close the door at anytime to stop the "change password" process.

3. Press the "change password" button to confirm.
4. Close the door to lock the safe.

NOTE: To return to the original password A, B, C, D remove and replace the batteries or press the reset button in the battery compartment.

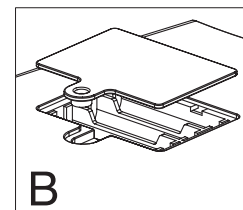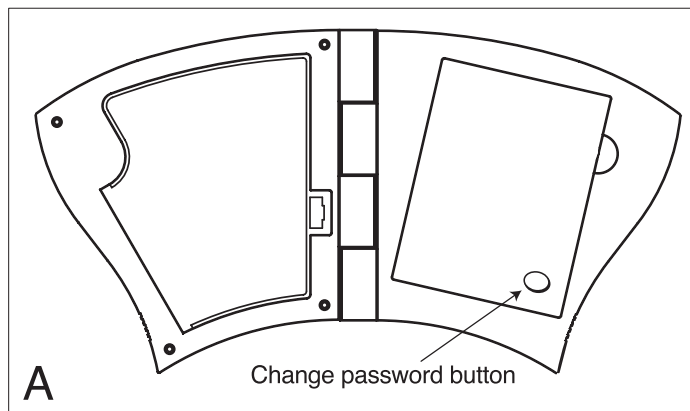

⚠ CAUTION

- Only adults should replace batteries.
- Do not mix old and new batteries.
- Do not mix different types of batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Use only fresh batteries of the required size and recommended type.
- Dispose of old batteries promptly and properly. Do not burn or bury them.
- If you do not plan to use your unit for several weeks, remove the batteries. Batteries can leak chemicals that can harm electronic parts.
- Replace the batteries when the unit stops operating properly or the display becomes dim.

