

Teller Machine

Instruction Sheet

Your Youniverse Teller Machine encourages you to save money! It's like a real ATM machine. You can keep your money safe because it has a unique combination lock on the vault door and your ATM card is required to access your balance. The coin slot recognizes the amount of each coin.

INSTALLING BATTERIES

Your bank requires two AA batteries (included). The batteries included are for demonstration purposes only. Please replace immediately.

1. Use a philips head screwdriver to loosen the screw on the battery compartment cover on back of the unit, and then lift up the cover.
2. Put the batteries into the compartment using care to match the polarity (+ and -) as marked inside.
3. Replace the cover and tighten the screw.

TO TURN ON YOUR BANK

Press the ON/OFF button to turn on your bank. The unit is now ready to deposit or withdraw your savings as instructed below.

Note: To save batteries, the bank will turn off automatically if not used for 30 seconds.

TO DEPOSIT MONEY

COINS: To deposit coins, simply insert coins to the corresponding value slot AFTER turning unit on.

Note: Make sure coins insert into the correct coins slot, otherwise, the total amount of the unit will be different to the actual coins inside the storage compartment.

BILLS: To deposit a bill insert it into the bill slot, and turn the knob to roll it into the bank. Press the "DEPOSIT" button and push the corresponding \$ value button.

TO WITHDRAW MONEY

If you want to withdraw money, open the vault door (see "To open vault door") and remove the money. Then press the "WITHDRAWAL" button and press one \$ or ¢ button for the amount removed. (repeat above step) for each bill and each coin removed.

TO OPEN VAULT DOOR

Find the two-number combination on the bottom of the bank. Turn the knob two full turns counter-clockwise (to the left) until the first number gets to the triangle. Then turn it clockwise (to the right) and stop when the second number gets to the triangle. Pull the knob to open the door.

ACCOUNT BALANCE

To check your account balance at any time, press the "ACCOUNT BALANCE" button, or insert the credit card (included). Your account balance is displayed on the screen.

RESET

If your bank is not working properly, or cannot be turned on, press RESET on the battery door on the back of the bank. If still not working, remove the batteries, wait about 1 minute, and then reinstall the batteries. The bank will reset and your account balance will be zero.

CARE

Keep the bank clean and dry. If it gets wet, wipe it dry immediately. Use and store the bank in normal temperature environments only. Handle the bank carefully. Do not drop it. To keep it clean and looking new, wipe it with a damp cloth occasionally.

Modifying or tampering with the bank's internal components can cause a malfunction.

CAUTION

- The batteries installed in your bank are for demonstration purposes only and we make no warranty as to the battery life. Replace the batteries when the bank stops operating properly or the display becomes dim.
- Do not mix old and new batteries or different types of batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Use only fresh batteries of the required size and recommended type.
- Dispose of old batteries promptly and properly. Do not burn or bury them.
- If you do not plan to use your bank for several weeks, remove the batteries. Batteries can leak chemicals that can harm electronic parts.

