

Teller Man

Instruction Sheet

To Operate:

1. To turn unit on, slide switch from “demo” to “play” mode.

To deposit money:

1. Press deposit button.
2. Add coins into coin slot.
3. Add bills into bill slot and enter amount.
4. Teller man will react to your deposits.

To withdraw money:

1. Press withdraw button.
2. Enter the amount you want to withdraw.
3. Open safe using turn dial.
4. Remove amount of money you just entered.
5. Close safe and turn dial to lock.

To check balance:

1. Press balance button.

BATTERIES INCLUDED

Replacing Batteries:

Teller Man uses 4 AA batteries (included).

1. Use a philips head screwdriver to loosen the screw on the battery compartment cover located on the back of the unit.
2. Remove cover and old batteries.
3. Insert new batteries into the compartment matching the polarity (+ and -) as marked inside.
4. Replace the cover and tighten the screw.

CAUTION:

- Only adults should replace batteries.
- Replace the batteries when the Teller Man stops operating properly.
- Do not mix old and new batteries or different types of batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadium) batteries.
- Use only fresh batteries of the required size and recommended type.
- Dispose of old batteries promptly and properly. Do not burn or bury old batteries.
- Non-rechargeable batteries are not to be recharged.
- Never use rechargeable batteries.
- Be sure the batteries are inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- If you do not plan to use your Teller Man for several weeks, remove the batteries. Batteries can leak chemicals that can harm electronic parts.
- The batteries installed in the unit are for demonstration purposes only. No warranty is given for battery life. Replace the batteries when the unit stops operating properly or the display becomes dim.

