

Ages 5+

ATM Savings Bank

⚠ BATTERY CAUTION!

READ AND SAVE THESE INSTRUCTIONS.

Only adults should replace batteries. Do not mix old and new batteries or different types of batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of old batteries promptly and properly. Do not burn or bury batteries.

The batteries installed in your ATM are for demonstration purposes only and we make no warranty as to the battery life. Replace the batteries when the ATM stops operating properly or the display becomes dim (Note: Removing the batteries will reset the account balance to zero). Batteries can leak chemicals and harm electronic parts, so remove them if you do not plan to use your ATM for several weeks.

- Use only fresh batteries of the required size and recommended type.
- Never use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Be sure the batteries are inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

1. Installing/replacing batteries.

The ATM Savings Bank requires 2 x AA batteries. Use a Phillips screwdriver to loosen the screw on the battery compartment and lift the cover. Install 2 x AA batteries into the compartment, being careful to match the polarity as indicated (+ and -). Replace the cover over the compartment and tighten the screw.

Press the POWER button to turn on the bank. The camera light will on and the bank will be ready to use.

Note: The bank will automatically turn off if it is not used for 1 minute.

2. Making a deposit.

To deposit coins, simply insert a coin into the coin slot AFTER turning unit on.

To deposit bills, turn the right hand side knob clockwise until a "click" sound heard. (Never turn the knob counter-clockwise!) After the knob is set, insert one bill at a time into the bill slot and then press the trigger switch on the knob. The bill will be swallowed. Press the DEPOSIT button and press the button which identifies the value of the bill.

Note: If your account balance exceeds \$999.99, "Full" will appear on the display. You need to clear your account to return normal operation.

3. Opening the vault door and making a withdrawal.

To withdraw money from your ATM Savings Bank, insert your ATM card into the slot which locates under Left hand side knob to open the door.

Remove the money you would like to withdraw and press the WITHDRAWAL button. Press the appropriate buttons for the bills and/or coins you remove. If you remove more than one, simply press the button more than once.

4. Checking your balance.

Press the ACCOUNT BALANCE button or insert the bank card. Your current account balance will be displayed on the screen.

- 💰 **To clear the account balance to zero or reset the ATM Savings Bank, press RESET button next to the battery door or remove all batteries, wait for 1 minute and then reinstall the batteries.**
- 💰 **Keep your ATM Savings Bank clean and dry. If any part of the Bank gets wet, wipe it dry immediately. Use and store the bank indoors, in environments which maintain normal temperatures.**
- 💰 **Handle the Bank carefully and do not drop it.**
- 💰 **Occasionally wipe the Bank with a damp cloth to keep it clean and looking new. Do not allow water in or near the electronic slot, as this may damage the device.**
- 💰 **Modifying or tampering with the ATM Savings Bank's internal components can cause it to malfunction and will void any warranty.**

COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Your new ATM Savings Bank works just like a real Bank Machine! Using your bank card to access your account or unlock the vault, saving money is easy!



© 2007 Summit Products, Inc.
Trussville, Alabama 35173
Made and Printed in China

