

Ages 8+

⚠ BATTERY CAUTION!
READ AND SAVE THESE INSTRUCTIONS.

Only adults should replace batteries. Do not mix old and new batteries or different types of batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of old batteries promptly and properly. Do not burn or bury batteries.

The batteries installed in your ATM are for demonstration purposes only and we make no warranty as to the battery life. Replace the batteries when the ATM stops operating properly or the display becomes dim (Note: Removing the batteries will reset the account balance to zero). Batteries can leak chemicals and harm electronic parts, so remove them if you do not plan to use your ATM for several weeks.

- Use only fresh batteries of the required size and recommended type.
- Never use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Be sure the batteries are inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

1. Installing/replacing batteries.

The ATM requires 3 x AA batteries. Use a Phillips screwdriver to loosen the screw on the battery compartment and lift the cover. Install 3 x AA batteries into the compartment, being careful to match the polarity as indicated (+ and -). Replace the cover over the compartment and tighten the screw.

2. Setting up your account.

Insert the included ATM card (or any other ATM or credit card) into the ATM card slot. Listen for a tone and watch for the red light to illuminate.

The top screen will say "WELCOME YOUR NAME".

First, we will change the ATM to show your actual name each time you insert your ATM card.

Press the Function button next to the "WELCOME YOUR NAME" message and the screen will change to read "ENTER YOUR NAME". Type in your name (up to 8 characters) using the Keypad. Press the Enter button to save your name.

The middle screen will say "ENTER PIN NUMBER".

Now, let's create a pin number to keep your account information secret.

Using the green buttons, enter 1, 2, 3, 4 (your preset pin number) and press Enter.

Note: If you have entered the code correctly, the top screen will say "ACCOUNT BALANCE", the middle screen will say "MAKE DEPOSIT", and the bottom screen will read "MAKE WITHDRAWAL".

We are now ready to change the pin number.

Press Enter two times. Your current pin number will appear on the bottom screen.

Enter a 4-digit code to use as your pin. (Make sure to remember it! If you do forget your pin number, you can remove the batteries to reset the machine to the preset code.) Press Enter after you have entered the new number.

Note: If the wrong pin number is entered three times, "INCORRECT CODE" will be displayed and the machine will automatically turn off. To reactivate the ATM, remove and re-insert the ATM card.

3. Making a deposit.

Press the middle Function button next to middle screen ("DEPOSIT MONEY").

To deposit coins, simply insert the coins and the ATM will identify the amount deposited.

To deposit bills, insert one bill at a time into the feeder. The middle screen will read "ENTER AMOUNT". Press the green number keys to enter the denomination of the bill (\$1, \$5, \$10, \$20, \$50, or \$100). Press Enter to confirm the amount.

4. Checking your balance.

Press the top left Function button ("ACCOUNT BALANCE").

Your current account balance will be displayed on the screen until the next function is chosen or after 10 seconds of inactivity.

5. Opening the vault door and making a withdrawal. (WITHDRAW MONEY)

To withdraw money from your ATM, press the lower Function button, the OPEN button will light up for 5 seconds. Press OPEN button to open the Vault Door and remove the specified amount of money. Enter the amount to withdraw and press Enter.

To turn the ATM OFF, remove the ATM card. The ATM will automatically turn off.

\$ To clear the account balance to zero or reset the ATM, press RESET button next to the battery door or remove and reinstall the batteries.

\$ Keep the ATM clean and dry. If any part of the ATM gets wet, wipe it dry immediately. Use and store the bank indoors, in environments which maintain normal temperatures.


\$ Handle the ATM carefully and do not drop it.

\$ Occasionally wipe the ATM with a damp cloth to keep it clean and looking new. Do not allow water in or near the electronic slot, as this may damage the device.

\$ Modifying or tampering with the ATM's internal components can cause it to malfunction and will void any warranty.

Deluxe ATM

Your new electronic ATM (Automated Teller Machine) acts just like a real ATM! Your personalized greetings will tell you how much money you have deposited, withdrawn and your account balance after you enter your secret pin number!

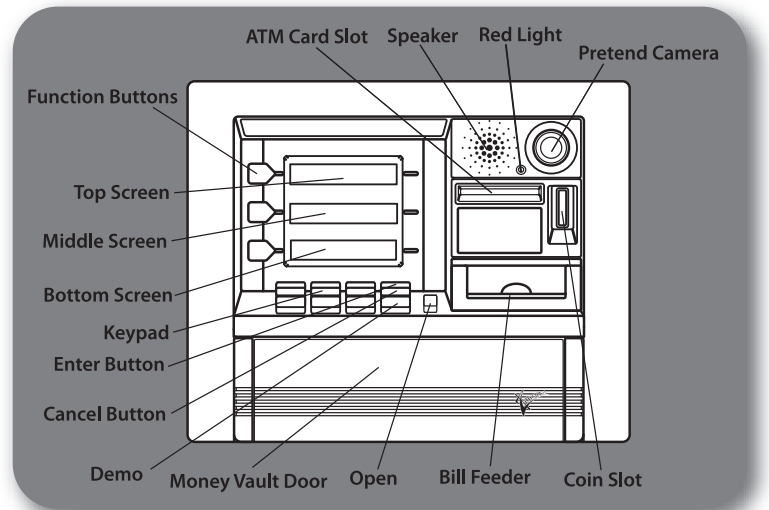

© 2007 Summit Products, LLC.
Trussville, Alabama 35173
Made and Printed in China