

Laser Beam Safe

For ages 3 and above

Instruction Sheet

To Turn Unit on:

1. To turn on the unit move the switch on the bottom of the unit from the Demo mode to the On position.
2. When the unit is not in use, it will automatically go to standby mode.

To Open the Safe:

1. Turn on the safe.
2. Without breaking the laser sensors, slide the door on top of the unit and enter your 4-digit code.
3. When the blue light on the thumb print button (on the front of the safe) turns on, push the button and the safe door will open.
4. When the safe has opened, remove or add your valuables.
5. Push the safe drawer closed and the "security system activated" sound will play to alert you your safe is locked.

Triggering and Deactivating the Alarm:

1. When the laser beam sensors are broken a "countdown" sound will play for ten seconds.
2. When the "countdown" sound begins, the 4-digit code must be entered to stop the alarm sequence.
3. If the correct code is not entered in the ten-second time frame the "alarm" will sound to alert you.
4. Once the alarm has sounded enter the 4-digit code to deactivate the alarm.

Note: When the correct code is entered during the countdown or alarm sequence, the safe must then be opened and closed again to reset the laser beam sensors.

Changing your 4-digit Password:

1. Press the "*" key.
2. Enter 4 numbers for the new password.
3. Press the "*" key a second time.
4. Your new password is saved

NOTE: User can change password at any time after power is turned on.

Reset Key

Press "Reset" key to reset the the 4-digit password to "1234".

Emergency Open

In case of malfunction, hold down the "WIRE" button and push on the drawer.

NOTE: Battery should be inside the unit to operate.

Replacing Batteries:

The Laser Beam Safe uses 3 AA batteries

1. Use a philips head screwdriver to loosen the screw on the battery compartment cover located on the back of the unit.
2. Remove cover and old batteries.
3. Insert new batteries into the compartment matching the polarity (+ and -) as marked inside.
4. Replace the cover and tighten the screw.



BATTERY CAUTION

Only adults should replace batteries. Do not mix old and new batteries or different types of batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of old batteries promptly and properly. Do not burn or bury batteries. The batteries installed in your Laser Beam Safe are for demonstration purposes only and we make no warranty as to the battery life. Replace the batteries when the Laser Beam Safe stops operating properly. Batteries can leak chemicals and harm electronic parts, so remove them if you do not plan to use your Laser Beam Safe for several weeks.

- Use only fresh batteries of required size and recommended type.
- Never use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Be sure the batteries are inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

© 2008 Summit Products, LLC.

Trussville, Alabama 35173
www.summittoy.com

Made and Printed in China

